





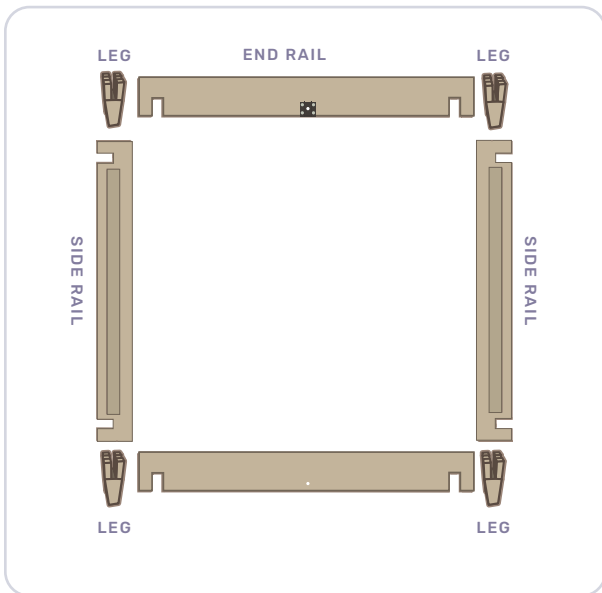


Assembly Instructions

Parts Checklist


 2x Thumb bolt	 4x Wood Screws	 4x Leg	 1x Center Leg
2x Side Rail 		1x Center Rail 	
2x End Rail 		2x Slat Bundles 	



Step 1


Layout the wooden pieces of foundation frame. Be sure that each end and side frame has the correct side facing upward. Leg pieces should all have the rounded corner facing outward.

The same process applies with a headboard (replaces one end rail).

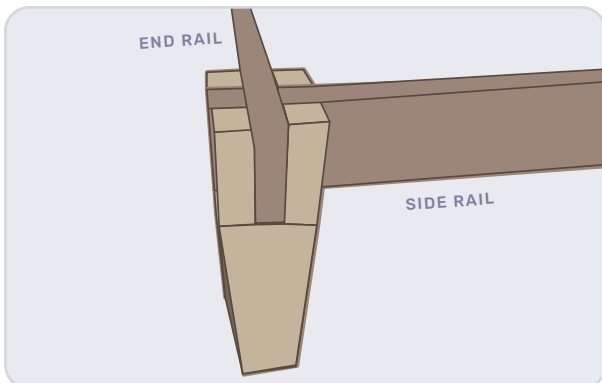


Step 2

Start at one end of the foundation. Insert both side rails into the leg of their designated corner. Finish the foundation frame of that side by inserting the end rail over the side rail on both corners.

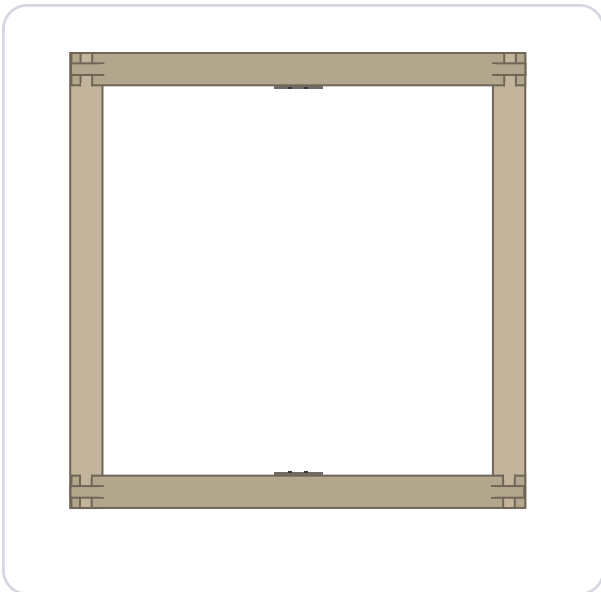


Step 3

Repeat step two with opposite side of foundation frame.

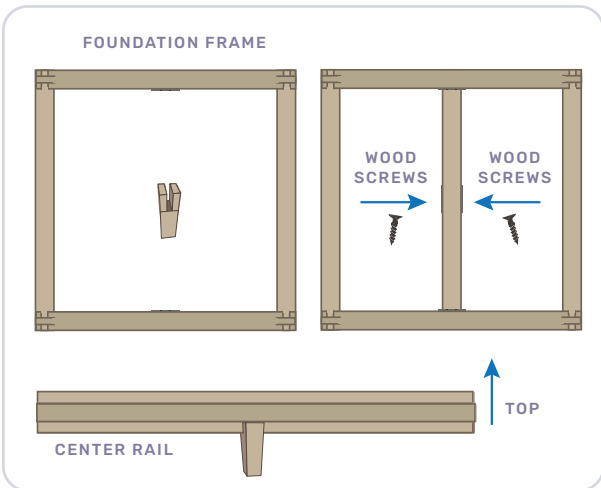


Step 4

Set up center leg and insert center rail correct side up. Insert two wood screws along the leg. The center rail will have a sticker on the bottom side so you know which side is up.

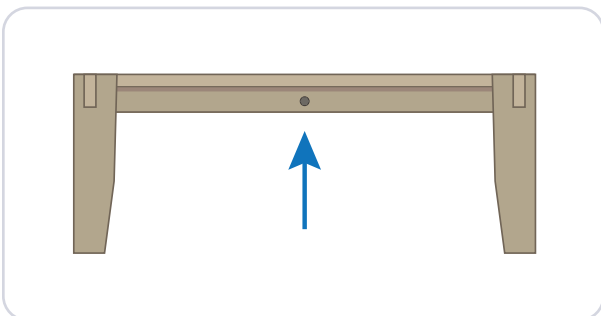

Step 5

Insert thumb bolt on both ends of your foundation frame.

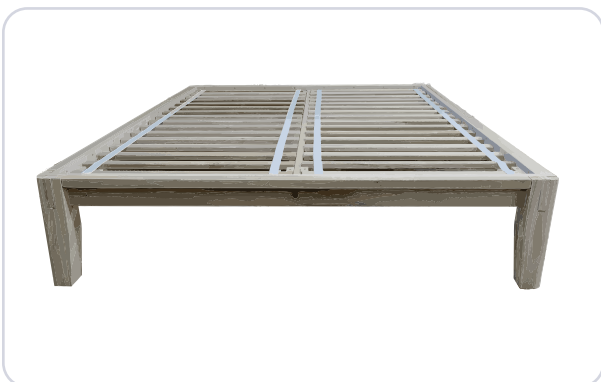

Step 6

Unroll slats and insert thumb bolt on both ends of your foundation frame.