


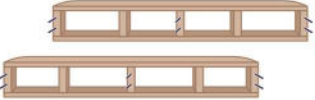

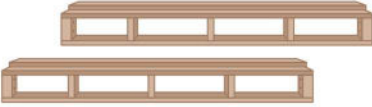

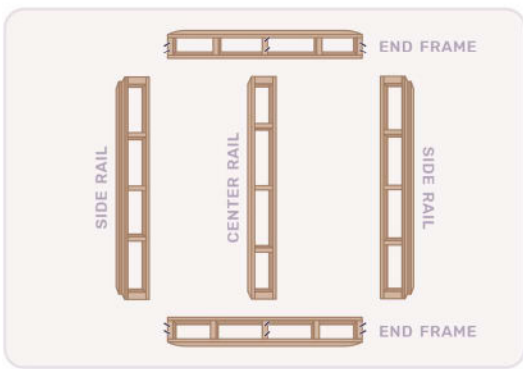


Foundation Assembly Instructions

Queen / Full

 13x Wingnuts	 13x Flat Washers	 13x Locking Washers	
 2x End Frames	 1x Center Rail	 2x Side Rails	 15x Wooden Slats Q 14x Wooden Slats F



Step 1


Lay out the five wooden pieces of the foundation frame. **Be sure that each End Frame and Side Frame has the recessed side facing up and toward the center.** This recess will hold the slats later in the assembly.

Look for the UP indicator on each of the four pieces as a guide.

Step 2


Start at one end of the foundation. Insert the bolts found on the End Frame through the holes in the Side Rail.

Be sure that the velcro and recessed top faces up.

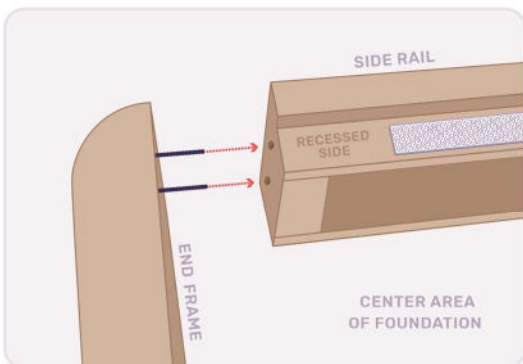


Step 3

Secure the End Frame to the Side Frame using enclosed hardware as shown. First, position the flat washer, then the locking washer, and end with the wingnut. You should now have one Side Frame attached to one End Frame.

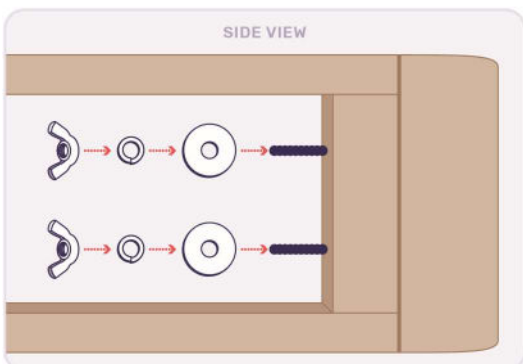

Foundation Assembly Instructions

Queen / Full

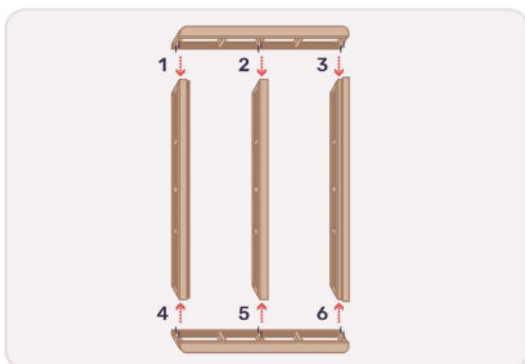

Step 4

Repeat the process for the Center Rail and remaining Side Rail. Attach the Center Rail and Side Rails to one End Frame first. Follow the number order as shown on the left. Secure the other end of the side frame to the remaining end frame. Ensure all hardware is securely fastened.

Remember to have the recessed part of the Side Frames Facing up and toward the center. When assembled correctly, the velcro will also be facing up.



Step 5

Starting at one end of the foundation, carefully lay the slats inside the foundation frame, velcro side down. Stretch the slats to ensure a snug fit. Use the velcro to secure the slats in place.