


# Assembly Instructions

## Twin / Twin XL / Split California King

### Parts Checklist


 <b>9x</b> Wingnut	 <b>9x</b> Flat Washers	 <b>9x</b> Locking Washers
 <b>2x</b> End Frames	 <b>2x</b> Side Rails	 <b>14x</b> Wooden Slats (Twin) <b>15x</b> Wooden Slats (Twin XL) <b>16x</b> Wooden Slats (Split California King)

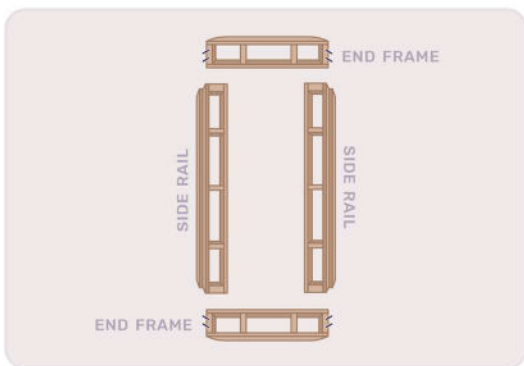

### Step 1

Lay out the four wooden pieces of the foundation frame. **Be sure that each End Frame and Side Frame has the recessed side facing up and towards the center.** This recess will hold the slats later in the assembly.


Look for the "UP" indicator on each of the four pieces as a guide.

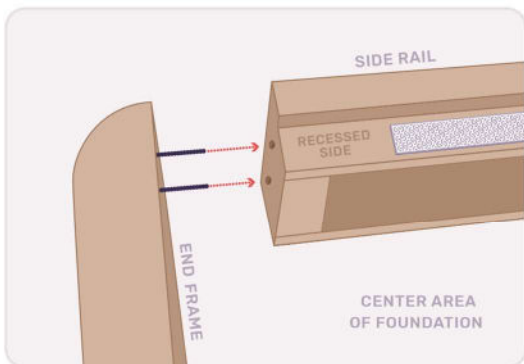

### Step 2

Start at one end of the foundation. Insert the bolts found on the End Frame through the holes in the Side Rail.

**Be sure that the velcro & recessed top faces up.**

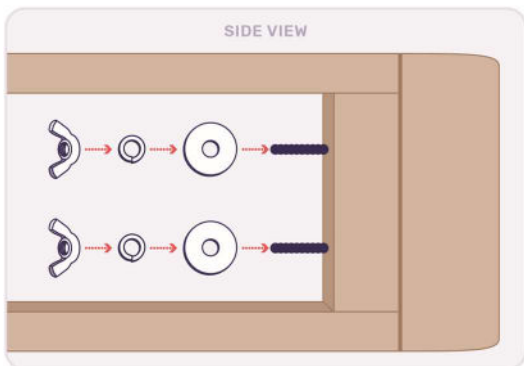


### Step 3

Secure the End Frame to the Side Frame using enclosed hardware as shown. First, position the flat washer, then the locking washer, and end with the wingnut. Secure the other end of the Side Frame to the remaining End Frame. You should now have one Side Frame attached to one End Frame.

# Assembly Instructions


## Twin / Twin XL / Split California King

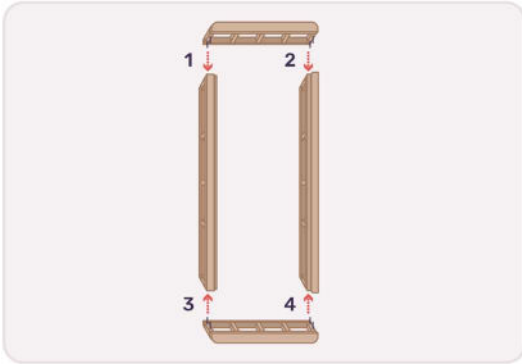

### Step 4

Repeat Steps 2 & 3 for the remaining Side Rail. Attach both Side Rails to one End Frame first. Follow the number order as shown on the left. Ensure all hardware is securely fastened.

**Remember to have the recessed part of the Side Frames Facing up and towards the center.** If correct, the velcro will also be facing up.

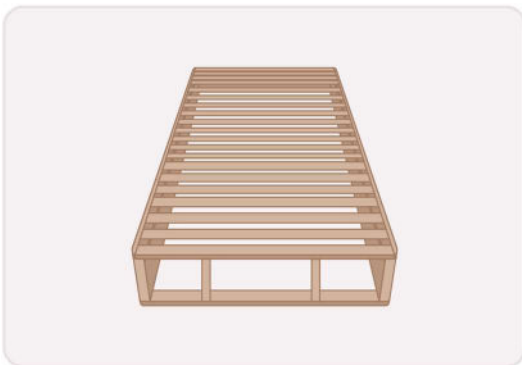

### Step 5

Starting at one end of the foundation, carefully lay the slats inside the foundation frame, velcro side down. Stretch the slats to ensure a snug fit. Use the velcro to secure the slats in place.